

 
Mic Off turns your microphone on and off.



Volume + and – adjusts the system volume.




Press OK to open the menu. Use arrow keys to navigate. When the menu is closed, use arrow keys to move the camera.*




Press Cancel to close the main menu or go one step back in sub menus.



 Press and hold to close all menus.



 
Change Layout on the screen. Press again to change to other layouts




Press Call to place a call.



 Use Phone Book to call stored contracts.



 Send Snapshot (only in a call). Press OK when done.



Presentation

Switch to PC (default).* Press once more to switch back to Main Camera.

Press and hold

Open Presentation menu, to select other sources.

Zoom

Use Zoom + and – to zoom the camera in and out.

Selfview

Press Selfview to see your outgoing image. Press once more to turn Selfview off.

End Call

Press End Call to end a call. Outside a call, press End Call to go to standby.

Number keys

Use number keys to dial. When you are in a call, select Camera Presets with the number keys.

Press and hold

Press and hold a number to store a preset.

Pound key and A/a key

Use the pound key to enter touch tone (DTMF) mode (in a call). Press OK when done.

Press and hold

A/a: When entering text, change between capital and small letters.

Hold to change between Character/Numeric mode.

*not available on all products

How to:

- **Activate the system**

Picking up the remote control activates the system. The system will automatically go to Standby mode when it is not in use. It is however still possible to receive incoming calls.

- **Place a call**

Dial a number and press the green “Call” key to place a call. You can also use the Phone Book facility to select contacts to call.

- **Answer an incoming call**

To accept an incoming call, press “OK” or the green “Call” key on the remote control. Press the red “End Call” key to reject an incoming call.

- **End a call**

Press the red “End Call” key to end a call. Press the red key once more or OK to confirm.

- **Adjust the volume**

Use the volume key to increase or decrease the volume. A volume bar appears at the top of the screen.

- **Mute the microphone**

Press the “Mic Off” key on the remote control. A mute icon will appear in the top right of the screen.

Press the “Mic Off” key on the remote control. The mute icon will disappear from the screen.

- **Control your camera***

When the menu is closed, use the arrow keys on the remote control to control your camera.

If the menu is displayed, choose the Camera Control facility in the menu and press “OK” to control the camera. Press “OK” when done.

Use the “Zoom” key to zoom the image in and out.

- **Select video sources***

Press the “Presentation” key to show your PC (default). Press again to switch back to Main Camera (default).

To select other video sources, select the Presentation facility in the menu.

- **Help desk contact information**

* not available on all products